


## A crude illustration of how the stock A pillar attaches to the underlying sheet metal

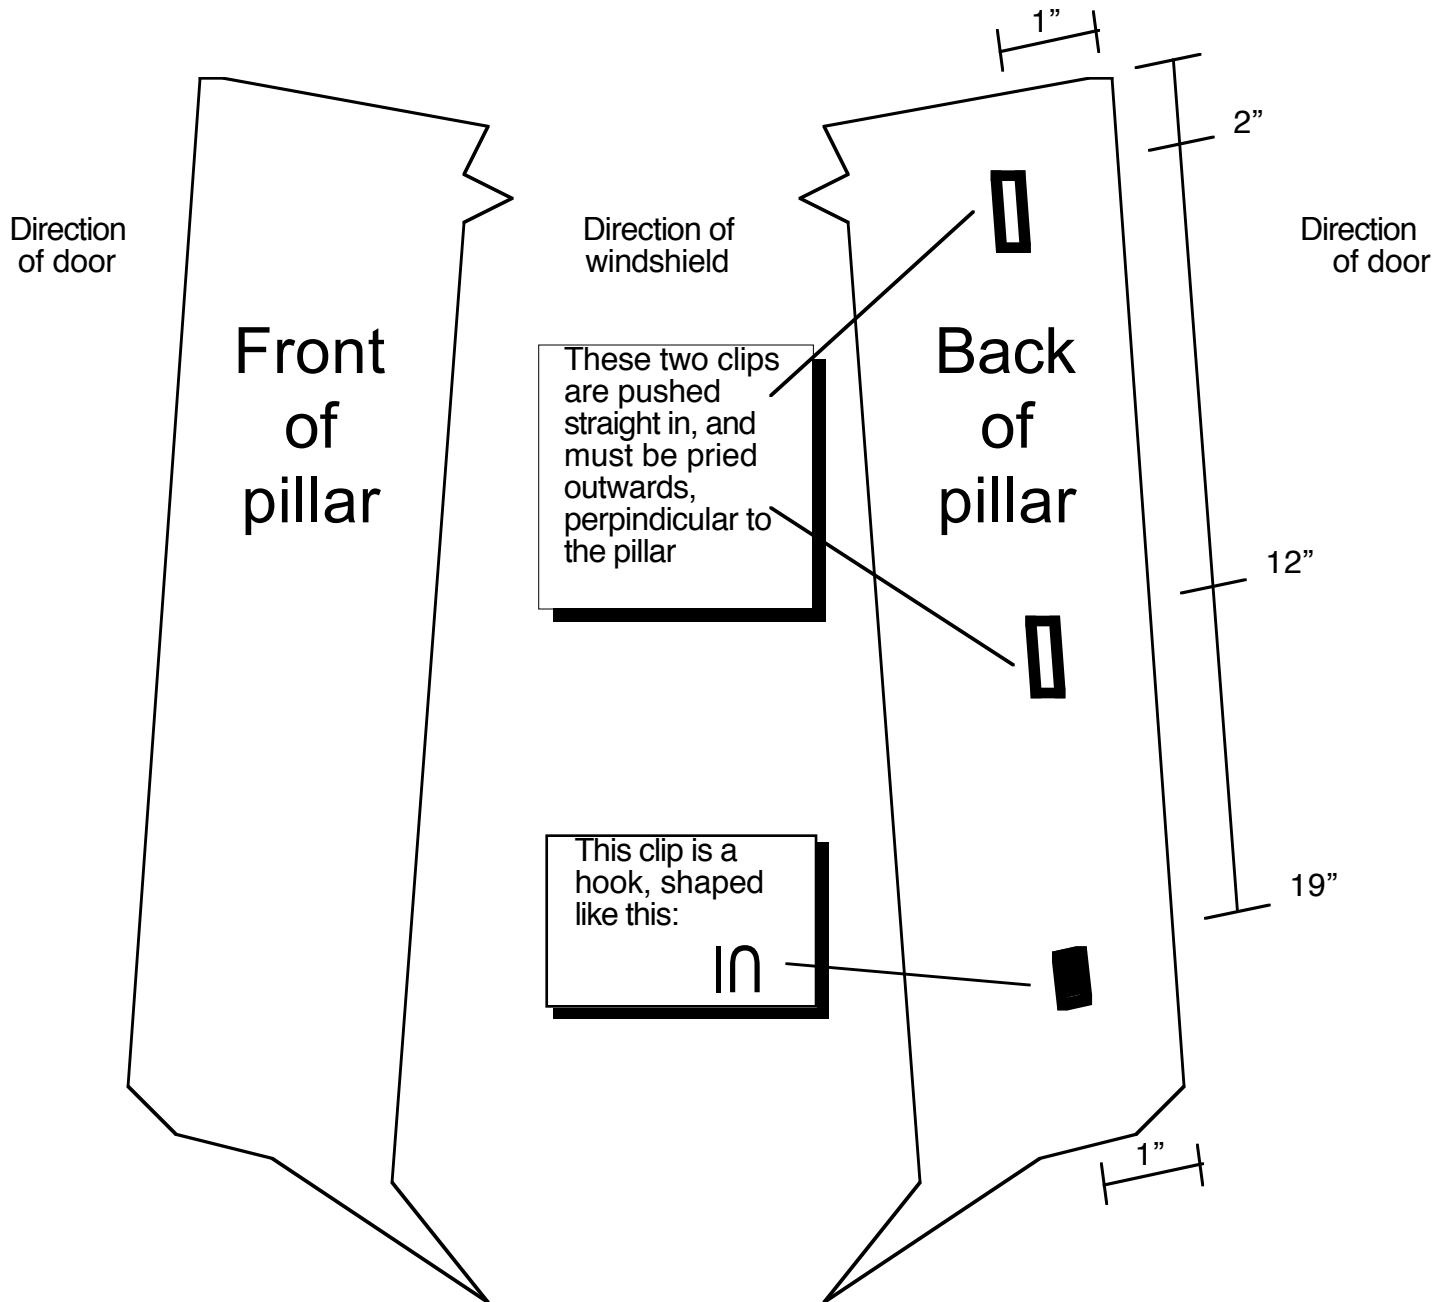

To remove the stock pillar:

1. G-e-n-t-l-y pry the top of the pillar straight out towards the passenger side of the cab, trying to get your screwdriver or putty knife as close to the clip as possible.
2. Repeat the above with the middle clip.
3. With the above clips separated from the metal A pillar, gently lift the pillar up towards headliner to free the bottom hook from the metal A pillar.